

List of tools required

- Utility knife
- Measuring tape
- Pencil
- Pull bar
- Jig Saw
- Table saw
- Caoutchouc hammer
- Spacer

Preparatory step 1

- 1- Insure about the flooring is at the same temperature at the ambient air in the room where it will be installed at least 48 hours prior of the installation
- 2- The temperature in the room must be in between 17 Celsius degrees and 23 Celsius degrees
- 3- The relative humidity must be in between 45% and 60%
- 4- Remove the baseboards of the walls
- 5- Cut out the door frames, to be able to slip the underlayment and the flooring under the door frame
- 6- The floor must be levelled, dry and clean before proceeding with the installation


Step 1 - Installing the underlayment

Install the underlayment in the same direction that the flooring will be installed




Step 2 – Installing the first plank

Start the installation in the left corner of the room, so that the top locking tap of the first plank is set up in the corner of the room

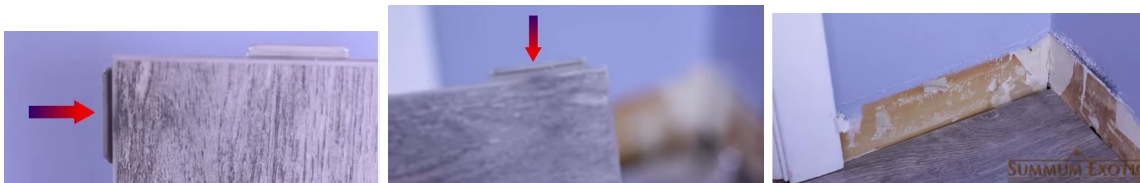


Step 3 – Installing the second row

- 1- Cut a plank of at least 12 inches. You can cut the plank at the juncture of any locking tap as you can see on the illustration below

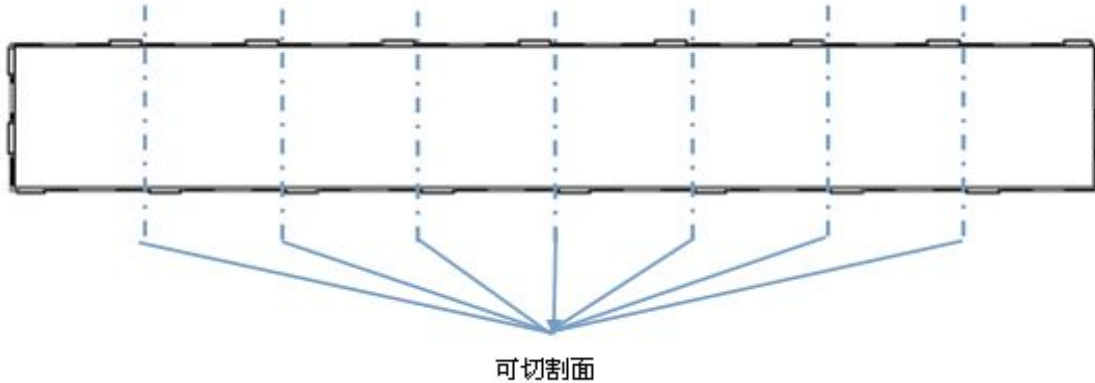

- 2- Proceed with the installation of the second row like placing the locking tap of the second row's plank into the groove of the first row's plank

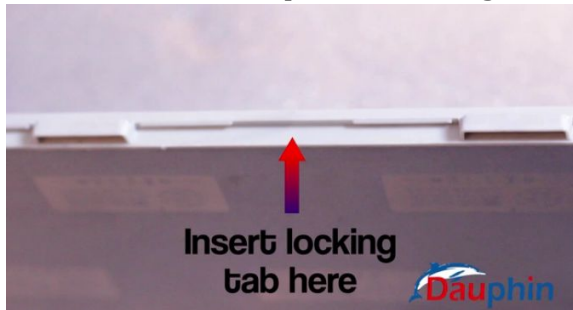


- 3- To connect the end of the plank slide the plank by tapping it with the hammer

Tip from an Expert


For the first two rows you can move them away from the wall to make the installation easier. You can then put the set of connected planks back in place along the wall.

Step 4 – Installing a plank at the end of a row

- 1- For the first row, take a full plank and measure the required length, and cut the plank. Place the plank.

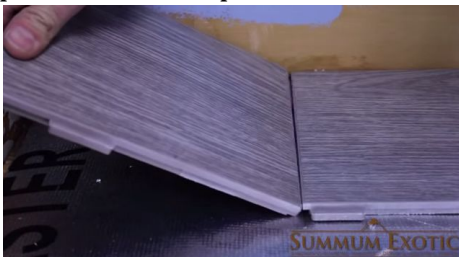

- 2- The last plank of the other rows must be installed with a hammer with a 45° angle. The plank can then be slipped in using a hammer and a pull bar.

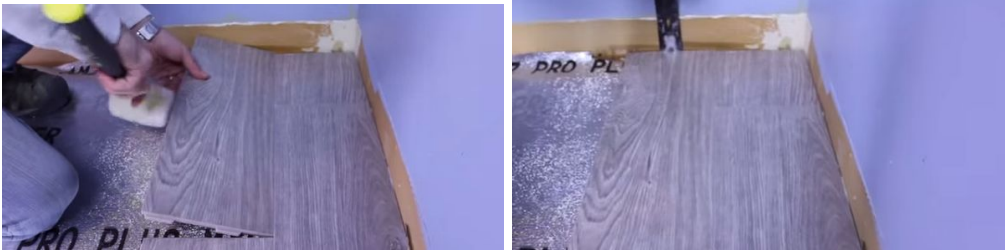

- 3- At the end of every row, insert spacers between the plank and the wall to stabilize your row.



PLEASE NOTE... To start any new row, repeat step 3

Step 5 – Installing the floor in a closet

You must watch the installing video on our Website

Step 6 – Installing the last row

- 1- Place the plank to be cut on the second to last row
- 2- Use a plank without tabs on the side as a guide to measure the width of your last row. And cut the plank.



- 3- Measure the length required and cut the plank.
- 4- Then install the plank (as step 3)

Step 7 – Installing the last plank

- 1- To install the last plank, slide it in with a hammer. Then, use a pull bar and a hammer to slide it up tight



- 2- If necessary, cut the raise part of the tab with an utility knife.



Step 8 – Removing the spacers and installing the baseboards

Maintenance advice

Use a cleaner formulated especially for laminated floor

Use felt pads under your furniture

